


How to exchange mirrors

2005/11/11

Disconnect a fan, a lamp
and a cooling air pipe
behind a mirror.



Once disconnected, there
are nothing behind the
mirror.

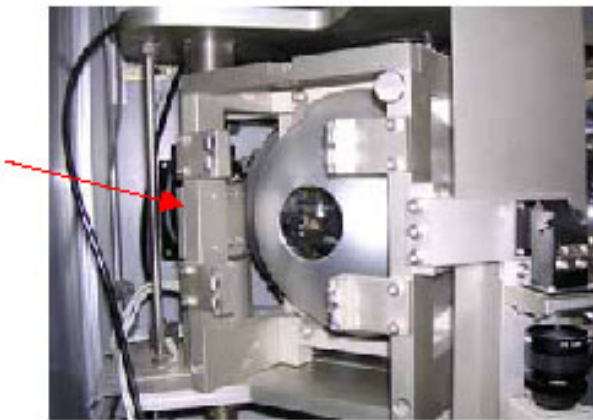

Release two screws on an
upper plate in front side of
a mirror.


Once released, the mirror
becomes unstable. It has a
possibility to fall down. Be
careful to the mirror more.



Incline the mirror ahead like a photo to detach it.

Wear gloves to do this.

If difficult to detach the mirror, Release two screws on a lower panel.

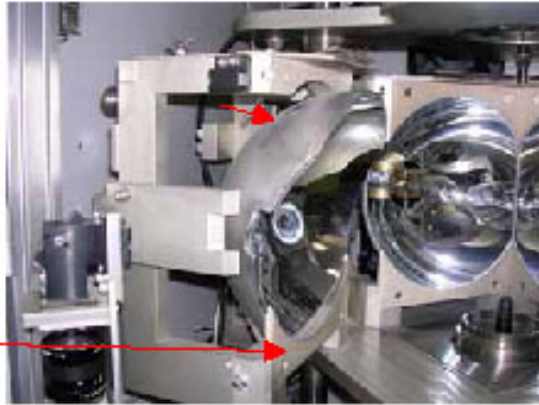

After the mirror detached,
Clean the flam.

If something remains in the part indicated by an arrow, the height of the mirror position would be changed.



Attach a new mirror in opposite order. Do not touch the mirror surface as less as you can during the attachment

In the same way, the other mirrors should be exchanged.

