


logic diagram (positive logic)

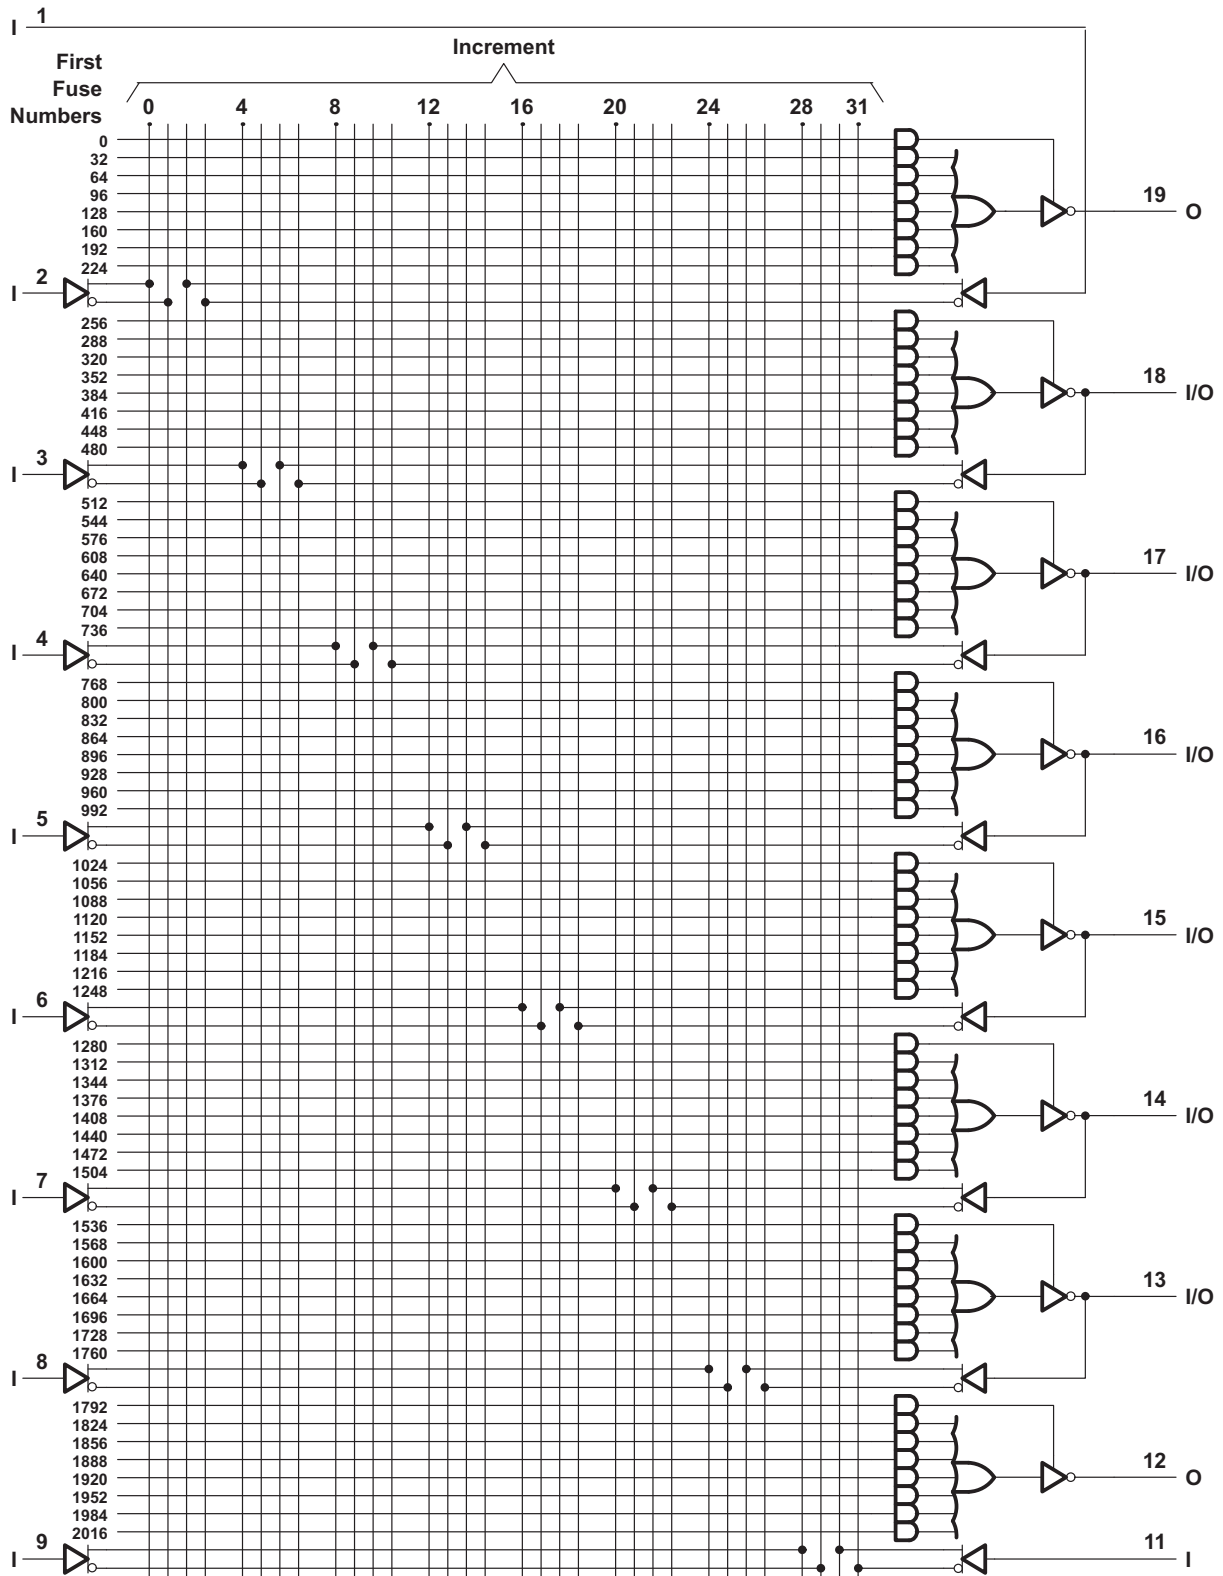

Fuse number = First fuse number + Increment