

Removing and installing all grab handles,

refer to 51 16 480

Removing and installing both trims for roof pillar front (A-pillar)

refer to 51 43 201

Removing and installing both trims for door pillar (top) (B-pillar)

refer to 51 43 148

Removing and installing both trims for rear roof pillar (C-pillar)

refer to 51 43 251

Removing and installing right front seat,

refer to 52 13 000


Removing and installing slide/tilt sunroof cover,

refer to 54 12 100

and/or

Removing and installing glass slide/tilt sunroof cover,

refer to 54 12 115

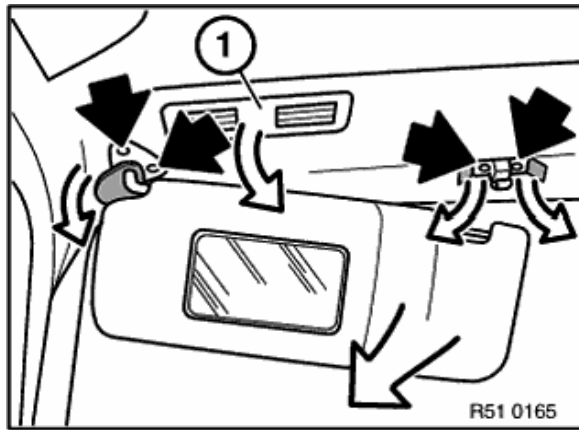

Lift out sun visor.


Lift out lamps (1) and remove connector.

Lift out finishers on counter support and joint and unfasten screws.

Pull lighting wire out slightly and disconnect connector.

Installation:


Perform function check on lighting.

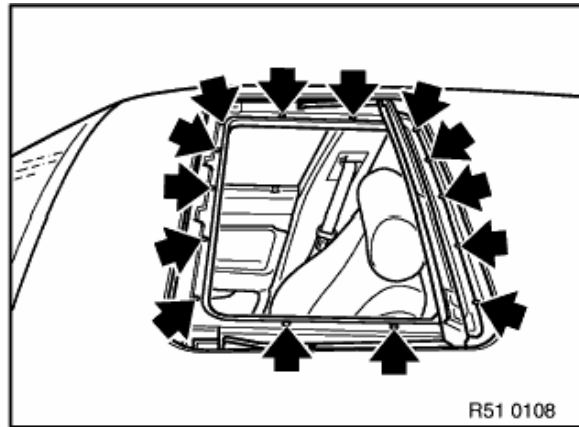


Unfasten screws and remove cover frame.

Only replace:


If necessary, replace nuts in headlining.

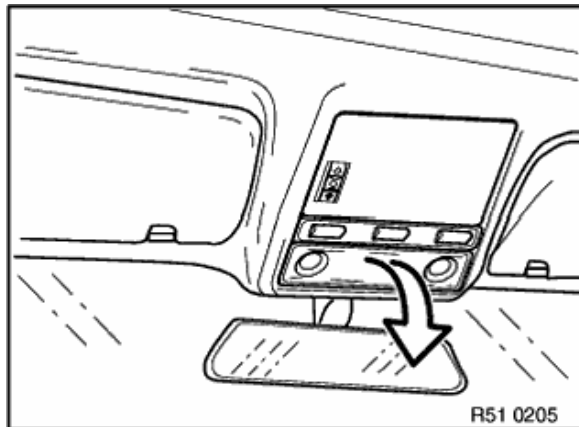

Lift out interior light and remove connector.

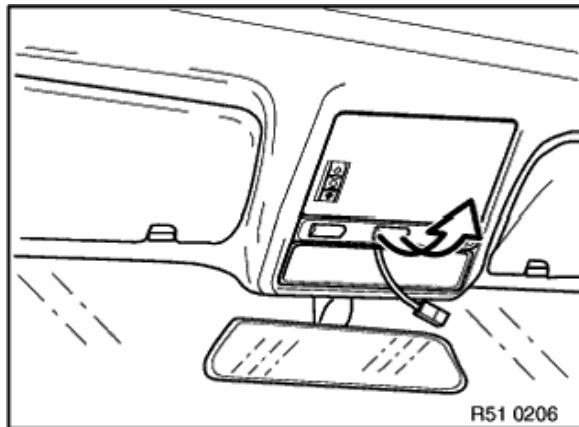

Lift out finisher and disconnect connector.

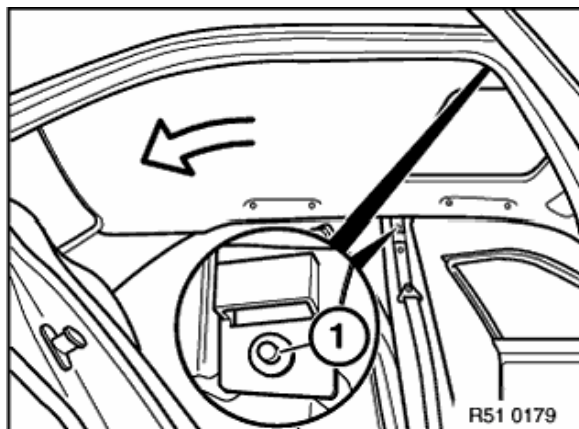

Adjust left back-rest as far back as it will go.


Version up to 5/97:

Lever out expansion rivet (1) on left/right.

Pull headlining upwards out of sheet metal tabs and pull towards right rear door to remove.

Version from 5/97:

Pull headlining upwards out of sheet metal tabs and pull towards right rear door to remove.

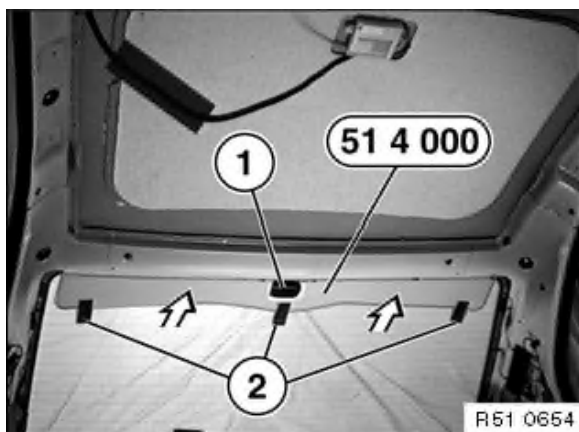


Installation:

Insert special tool 51 4 000 in the support for headlining and secure with fabric adhesive tape (2).

Version with telephone connection unit:

If necessary, slide over telephone connection unit (1).

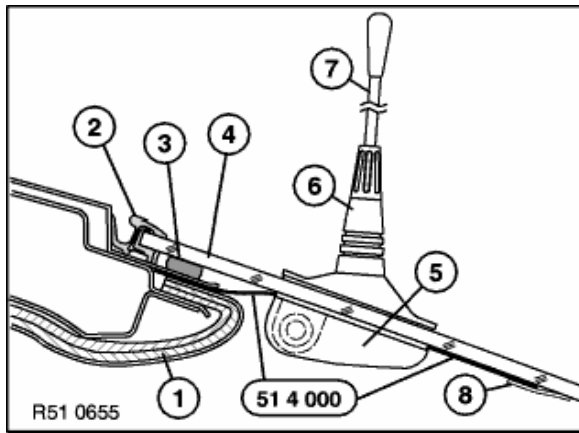

Installation:

Press headlining (1) upwards against special tool 51 4 000. Press towards to limit position and secure.

Remove special tool 51 4 000 and clean rear window.

- 1 Roof liner
- 2 Seal
- 3 Cement bead
- 4 Rear window
- 5 Switch box
- 6 Antenna foot
- 7 Transmitter
- 8 Fabric adhesive tape