


**Caution!**


After assembly, perform rear wheel alignment check/adjustment

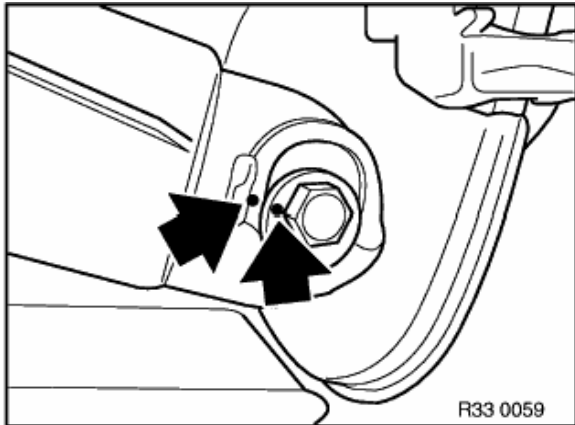

Refer to 36 10 300.

Remove wheel.

Use peening tool to mark position of eccentric screw relative to swinging arm. This simplifies the subsequent task of adjusting toe.

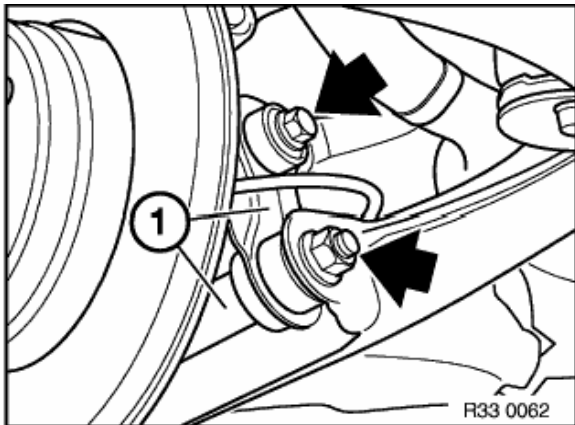

Unfasten disc collar nut and screw.

Unscrew and remove eccentric screw.

Remove integral link (1).

Installation:

Replace disc collar nut.

Tightening Torque,
refer to Technical Data 33 32 22AZ / 21AZ